


APPLICATION GUIDELINES (FOR BOILERS)

ZONE VALVES

Install a motorized valve with each air handler to control flow to that zone as required.

TYPICAL WIRING SCHEMATIC
FOR MULTIPLE ZONE CONNECTIONS WITH ZONE VALVES

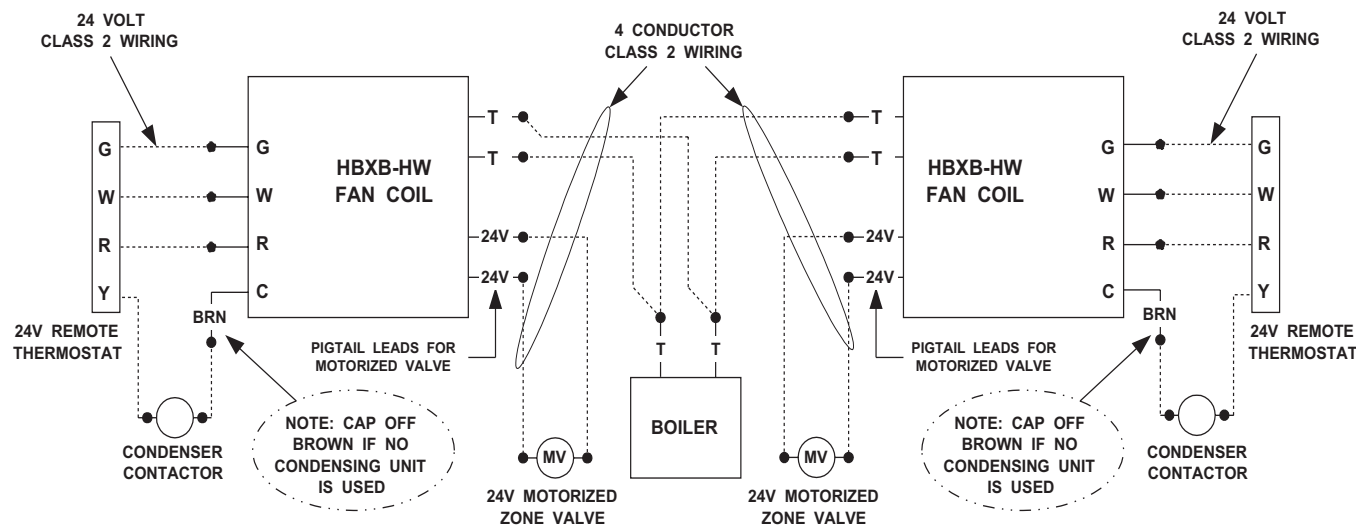

TYPICAL WIRING SCHEMATIC
FOR MULTIPLE ZONE CONNECTIONS TO TACO SR-504/506 SWITCHING RELAY

